

OWNDAYS CONNECT

 Bluetooth® 5.3




SMART AUDIO GLASSES

Instruction Manual

Product Contents




Spectacle Frame

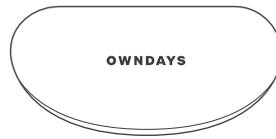

Spectacle Case



Spectacle Cloth

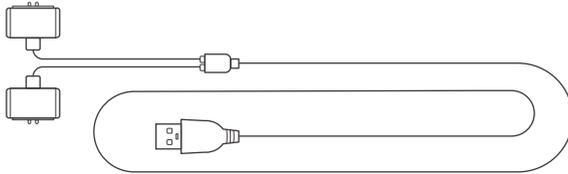

Charging Cable




Instruction Manual QR Card

⚠ AC adapter sold separately ⚠

Please prepare a power adapter with USB-A port that has an output of 5V2.4A or lower.


*Do not use a fast charger with an output current of more than 2.4A or a voltage of more than 5V.

Frame Features

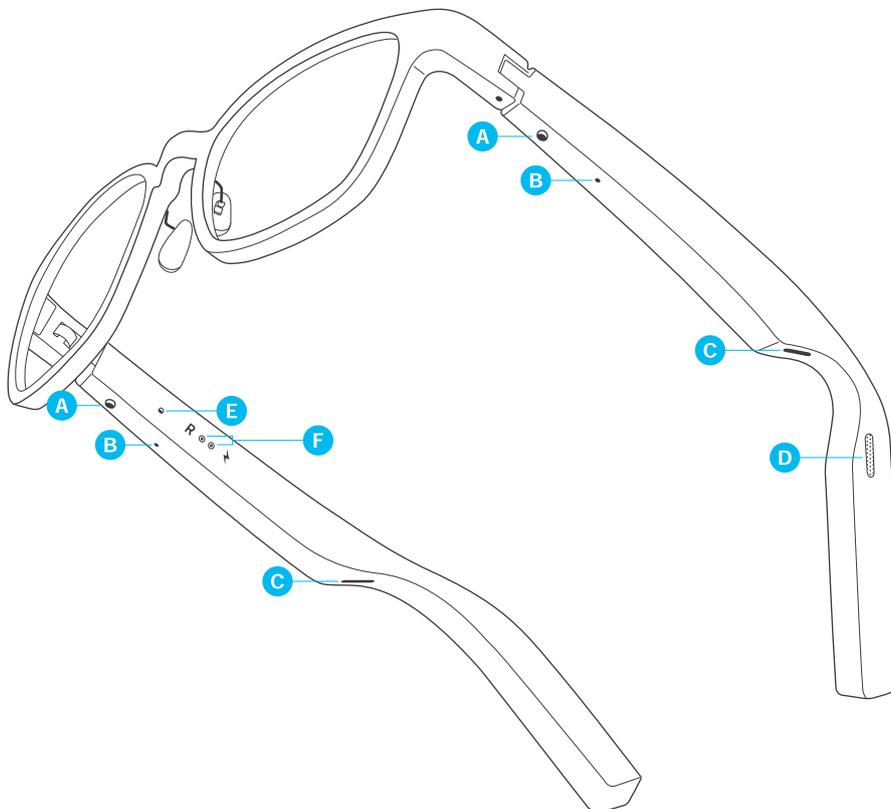


- A** Smart Button
- B** Microphone
- C** Speaker Port
- D** Built-in sound leakage reduction port
- E** Indicators (inside both temples)
- F** Charging port (one on each temple)

Charging Instructions

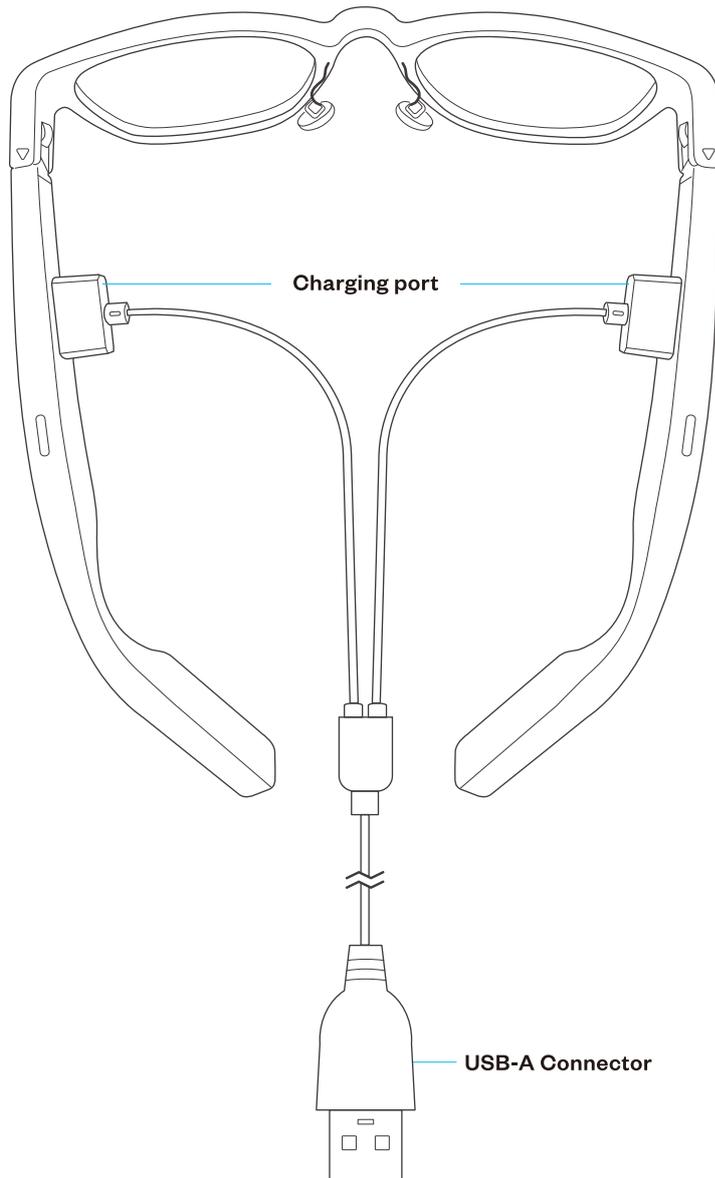


Charging

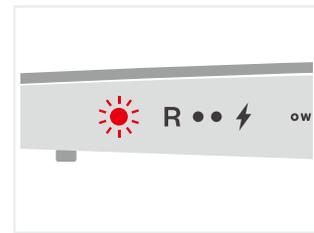

Red indicator lights up

Full

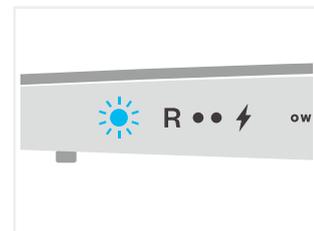


Blue indicator lights up




- *Please use the charging cable that is provided with the product.
- *Keep the charging terminals of the product and the charging cable free from foreign materials.
Do not place magnetic cards or any other items that are affected by magnetism near the product.
- *Ensure that the charging cable is connected in the correct direction and is securely connected.
- *Do not attach the charging terminal of the charging cable to any metal object while the charging cable is connected to the AC adapter.
- *Do not use fast chargers that have a current output of more than 2.4A or a voltage of more than 5V.
- *Overcharging may cause the battery to overheat and catch fire.
Overcharging may also cause battery deterioration and product malfunction.

How to Pair

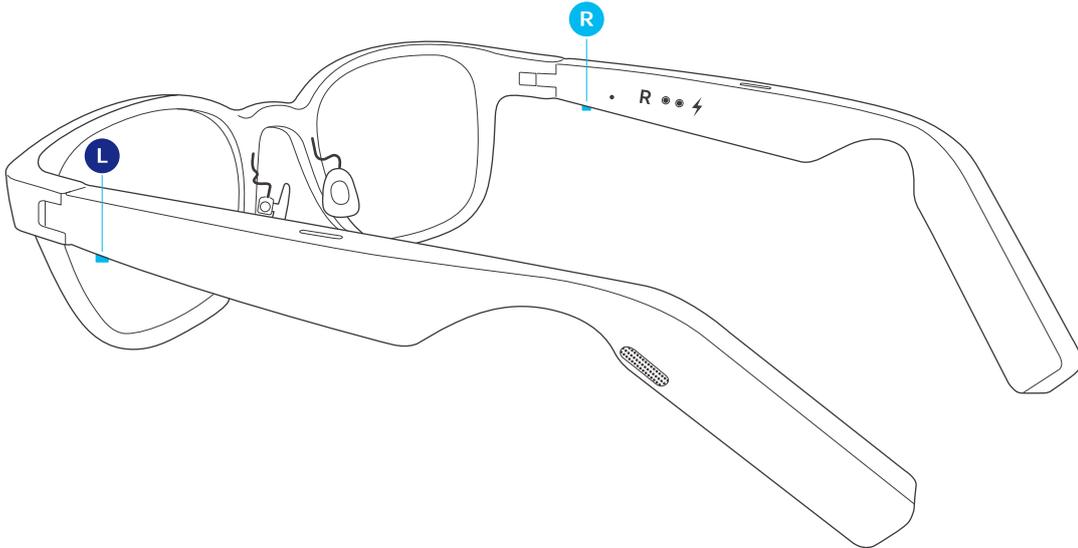

01

Press and hold the left and right smart audio buttons simultaneously for 3 seconds.

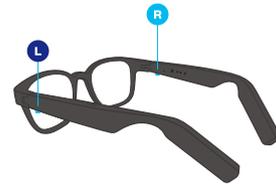

02

Red and blue lights flash alternately.



03

Select OWDAYS CONNECT on the Bluetooth settings screen of your smartphone.



04

You will hear a sound notification when the connection is successful.



How to reset to factory settings

Simultaneously click the left and right smart audio buttons 3 times, then long press for 5 seconds and release.

This will restore the settings to factory default.

Control Guide

Item	Instructions	How to Use
 Power On/Off	Power On	Press and hold the left and right buttons simultaneously for 3 seconds
	Power Off	Press and hold the left or the right button for 4 seconds
 Voice Call	Answer Call	Double click left or right button
	End Call	Double click left or right button
	Decline Call	Press and hold the left or the right button for 2 seconds
	Incoming Call (Keep current call and answer new call)	Double click left or right button
	Incoming Call (End current call and answer incoming call)	Press and hold the left and right buttons simultaneously for 3 seconds
 Play Music	Play/Pause	Double click left button / double click right button
	Previous Song	Triple click left button
	Next Song	Click right button 3 times
	Increase Volume	Click right button once
	Decrease Volume	Click left button once
 Voice Assistant	Activate Voice Assistant	Press and hold left or right button for 2 seconds
 Pairing	Start pairing phone	Press and hold the left and right buttons simultaneously for 3 seconds

Product Specifications

Continuous Music Playback Time	8 hours
Charging Time	2 Hours
Battery Level Notification	Sound alert when battery is low
Output	300mW (milliwatt)
Built-in sound leakage reduction.	Yes
Call Noise Cancellation	None
Bluetooth	5.3
Water and Dust Resistant	IPX4 water-resistant
Dedicated App	None

Safety Precautions

- To protect your hearing, do not listen to audio at loud volumes for prolonged periods of time.
- To avoid damage, malfunction or fire, do not heat or bend the temples of the frame.
- This product complies strictly with the standards of ISO 12870:2016 for spectacle frames.
- This product does not offer protection against injury or harm to the eyes when looking directly at strong light sources such as the sun.
- Clean the lenses with the cleaning cloth provided or a soft, clean cloth. Do not use sharp objects or abrasive substances to clean the lenses. Use neutral detergent to remove dirt. Do not use abrasive detergents, sprays, high concentration detergents, chemical cleaning agents, alcohol or acetone solvents to clean the lenses as they may cause damage, distortion or discolouration to the lenses.
- To avoid dermatitis, please clean the frame regularly.
- Do not wear the product while exercising as the product may be damaged and cause injury to the face.
- Some wireless devices may interfere with the functioning of implanted medical devices such as pacemakers, cochlear implants, hearing aids and other medical devices. Please keep the product at least 15cm away from such medical devices. For more information, please consult the manufacturer of the medical devices.
- Temperature range: 0°C to 35°C during use; -20°C to 40°C during storage
- When charging, please connect the power adapter to a power outlet within reach. Use only certified power adapters and chargers. Do not wear the product while charging.
- Please comply with the regulations of your local jurisdiction. Exercise caution when using the product while driving.
- The product and its accessories may contain small parts. Please keep them out of the reach of children to avoid the risk of choking.
- The product is rated IPX4 in accordance with the IEC 60529 standard.
It has been confirmed to be splash resistant when tested under controlled lab conditions.
Splash resistance is not permanent and the protection may deteriorate with daily wear and tear.
Therefore, please keep the product and its accessories away from rain and moisture.
- In the event that the product or its accessories become wet, please wipe off the moisture as soon as possible and place the product in a cool and well-ventilated place to dry. Do not use or charge the product until it is completely dry.
- Do not disassemble, drop, hit, compress, modify, insert foreign objects into or immerse the battery in liquid.
- The product is built with a lithium-ion battery.
Do not attempt to replace the battery by yourself as it may cause damage to the battery and lead to overheating, fire and injury.
- Do not leave the product's battery under extreme low pressure conditions to avoid explosion or leakage of flammable liquid or gas.
- Do not disassemble or modify the product and its accessories. Any unauthorised disassembly or modification will void the warranty.
- Before cleaning and maintenance, please terminate the use of the product and disconnect all paired devices.
- The charging cable is not waterproof. Please clean the charging contacts of the spectacles and the spring of the charging cable before charging. If they are wet, please wipe and dry them immediately to avoid short circuit.
- Do not use ultrasonic cleaning on the product.

Skin Sensitivities

If you are prone to skin allergies, please discontinue use immediately and seek medical attention.

Materials

Rim: PA

Temple: PA

Nose Pad: Silicone

Frequency Band

Bluetooth: 2.4 GHz

Technical Standards Compliance Information

The product complies with the technical standards of the Radio Law.



R 020-250120